


Technical Services Group, Inc.

503002 MINI CDRH SWITCH

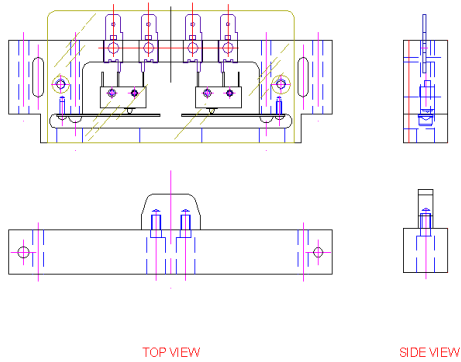

503002 CDRH Interlock Switch

This CDRH type switch is used to interlock x-ray equipment. This two part switch is to be attached to opening doors, panels, and personnel restrictive areas. This is a redundant switch configuration. The internal switches are typically used in series to reduce possible switch shorting failure. The switches are to be used to open a logic circuit, and the metal contact is to be used to open primary high voltage power.

Specifications:

Main switch block

Sizes: 5.5" wide, 1.75" tall, .75" depth.

Contacting block

Sizes: 5.5" wide, .75" tall, .75" depth.

Power: Primary contacts – 120 VAC @ 10 amps (continuous)
Miniature switches – 120 VAC @ 5 amps

675-C Progress Center Avenue Lawrenceville, GA. 30043 (770) 822-9117 fax: (770) 822-5643